TOP OF FRAME

INSTALLATION INSTRUCTIONS

YOUR PLEXIDOR MUST BE INSTALLED WITH SPRINGS AT THE TOP, AND IN A TRUE VERTICAL POSITION. OTHERWISE IT WILL NOT WORK PROPERLY. PLEASE CHECK THIS WITH A SQUARE OR PLUMB LINE.

1. **See Owner's Manual** for correct positioning of pet door, and notes on different types of installations.
2. **Tape template** securely to the **INSIDE** of the house door.
3. **Using a center punch or nail and hammer** make a firm indent through the template into the door at the center of the seven holes, then remove template.
4. **Using a 5/8" dia. drill**, make the holes, drilling right through the door.
5. **With a felt tip pen and rule**, mark out the thick sawing lines as on template.
6. **Using a jigsaw**, cut along sawing lines, then square cut corners with a rasp or chisel.
7. **Place pet door in position with spring at top.** Hold pet door in place and insert the four screws.
8. **Screw on the four exterior frame pieces** with the angled guttering piece on top.

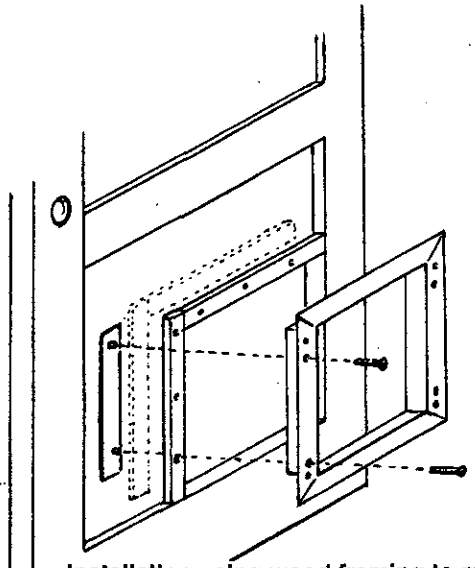

Installation using wood framing to make up house door thickness to 1 3/4" on side and top edges.

TOOLS YOU WILL NEED:

Square or Plumb Line
Hammer
Rasp or Chisel
Felt Tip Pen
Center Punch
5/8" dia. Drill
Jigsaw
Rule

DOOR TEMPLATE

USE AS A GUIDE ONLY FOR WALL

PLEASE READ ALL INSTRUCTIONS BEFORE CUTTING

SAWING LINE

TEMPLATE SIZE S

BOTTOM EDGE OF FRAME